


OPTION

NWW-58

REMOTE DISPLAY

NWW-58 Remote Display

Operating Controls

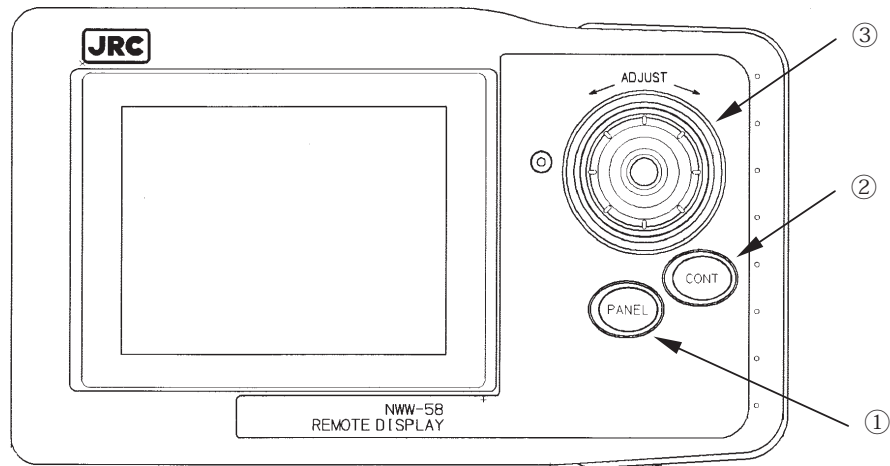


| No. | Name | Function |
|-----|--------------|--|
| ① | Panel Dimmer | Set panel dimmer level with the adjust dial. |
| ② | LCD Contrast | Set LCD contrast level with the adjust dial. |
| ③ | Adjust Level | Adjust level. |

REMOTE DISPLAY NWW-58


In case of panel and LCD dimmer are dark.

1. Internal dimmer

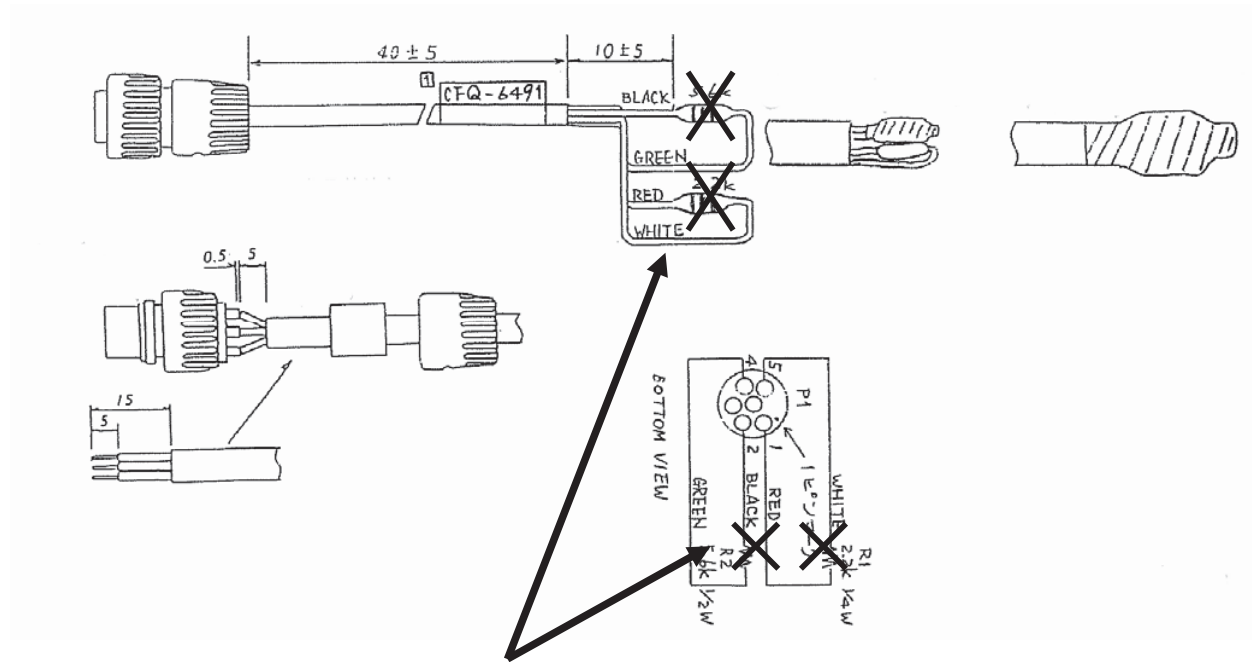

Cut and short the resistor.

2. External dimmer

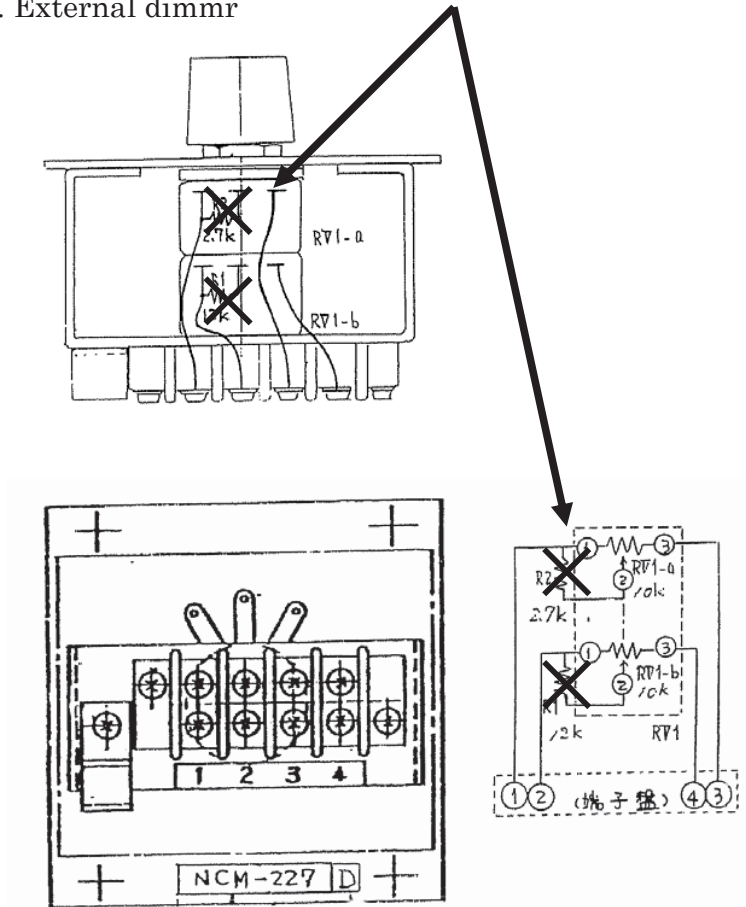


PAIR

BLACK & GREEN → EL DIMMER

WHITE & RED → PANEL DIMMER

NWW-58

CONNECTOR
PIN NO.

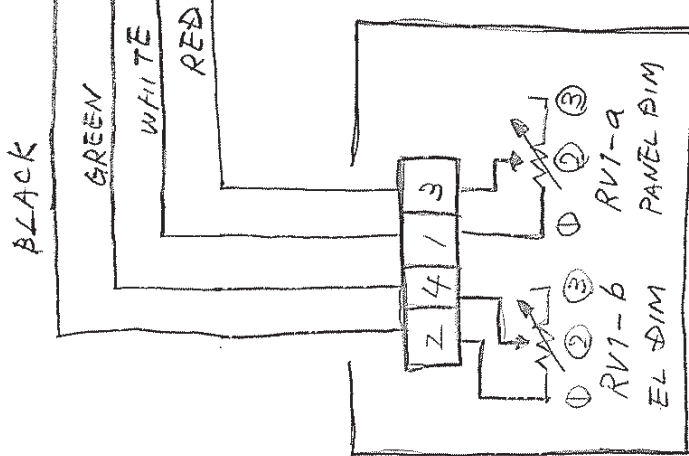

NCM-227D
DIMMER UNIT

