2. SYSTEM DIAGRAM

2.1 GMDSS Console system configuration

NCU-331E /F/G(1)

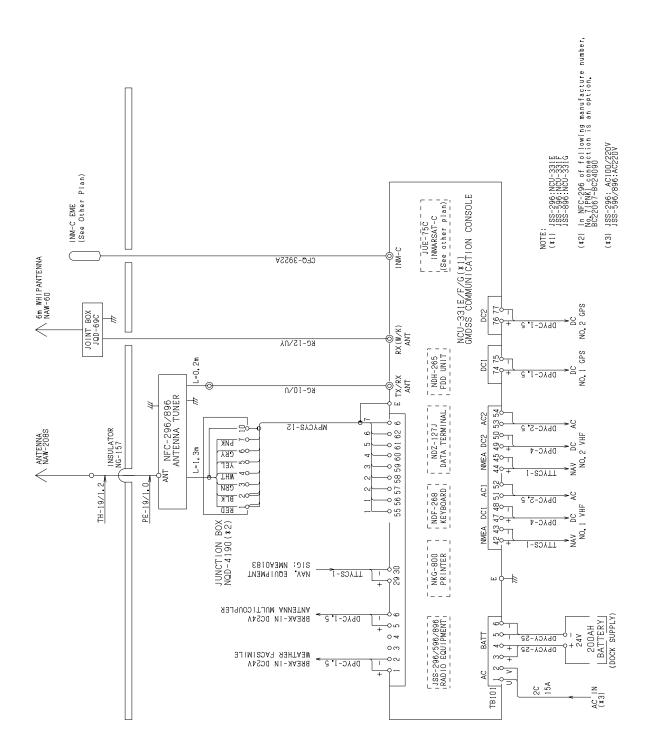


Figure 2-1 NCU-331E/F/G (1)

NCU-331E /F/G(2)

Antenna Tuner is installed in the outdoors.

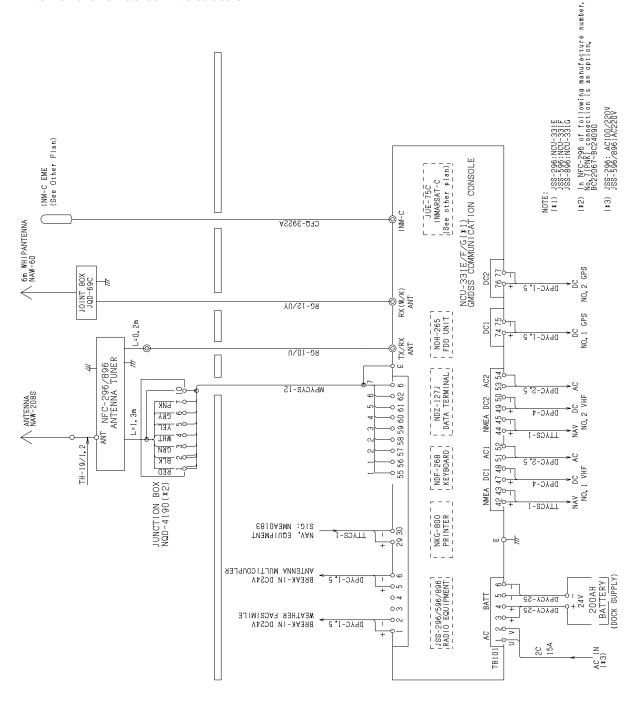


Figure 2-2 NCU-331E/F/G (2)

NCU-324E/E/F/G, NCU-692

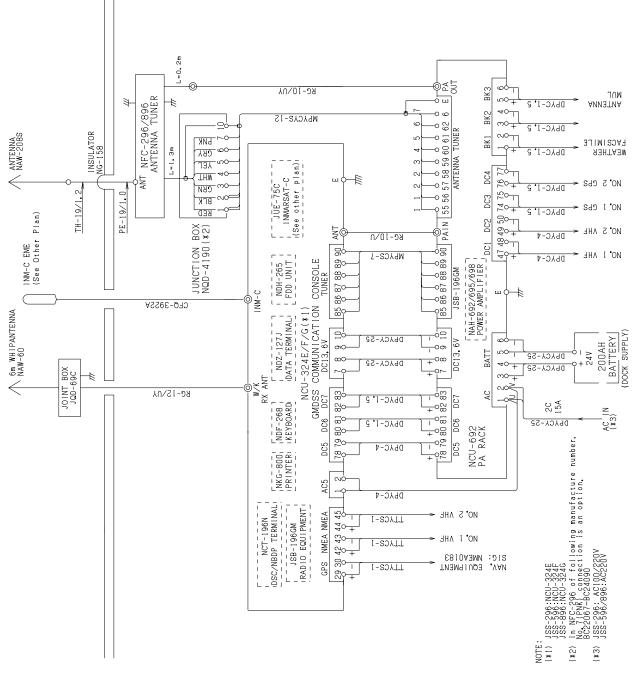


Figure 2-3 NCU-324E, NCU-692

NCU-1960, NCU-692

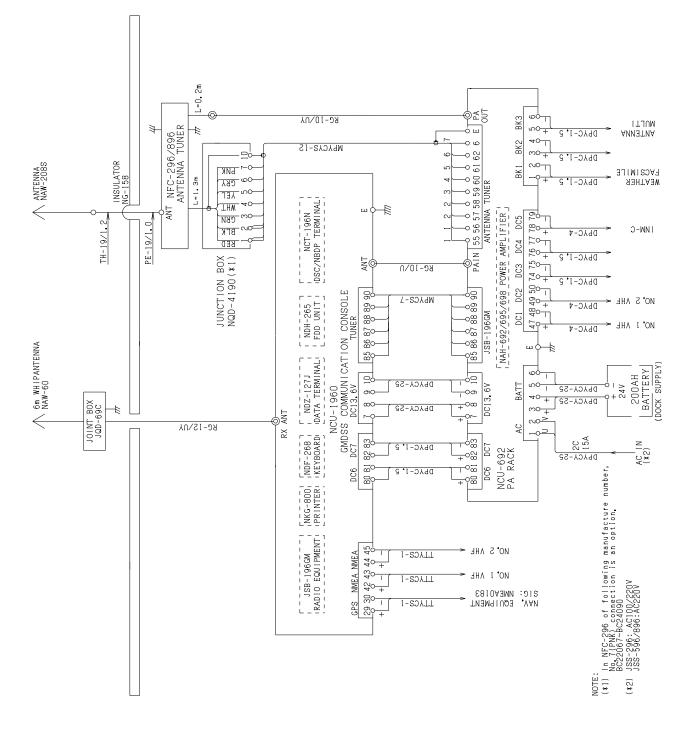


Figure 2-4 NCU-1960, NCU-692

NCU-692, NQE-3196


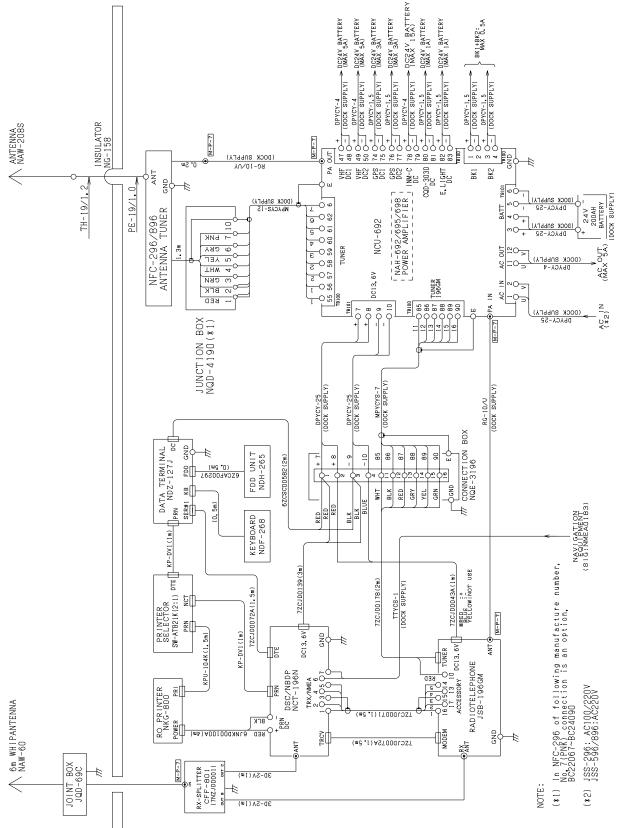


Figure 2-5 NCU-692, NQE-3196

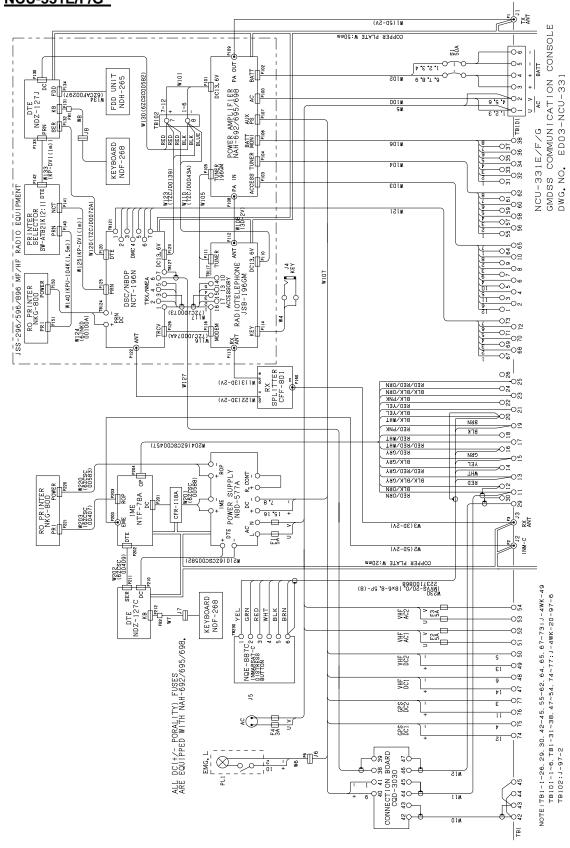


2.2 GMDSS Console Interconnection diagram


NCU-331E/F/G

Figure 2-6 NCU-331E/F/G

NCU-324E/F/G

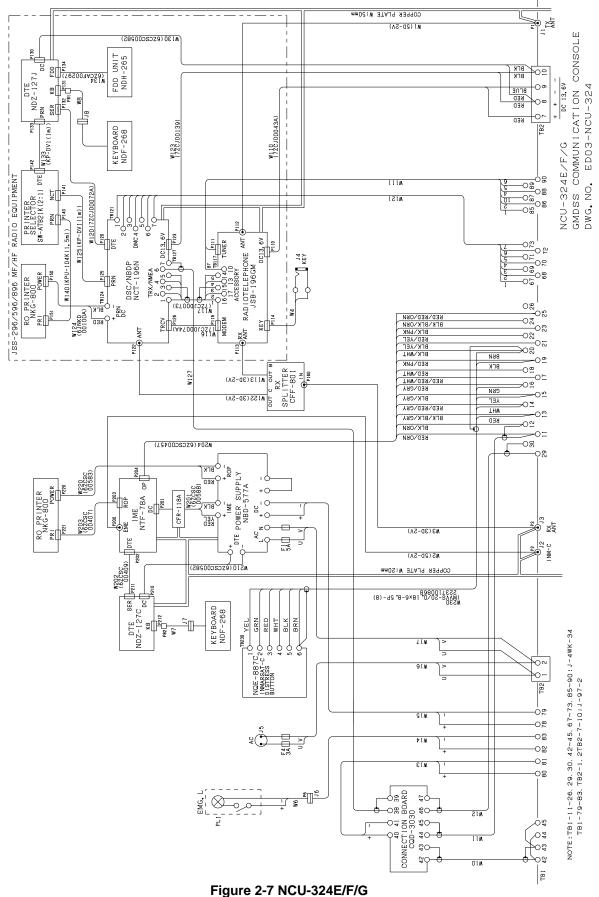

NCU-1960

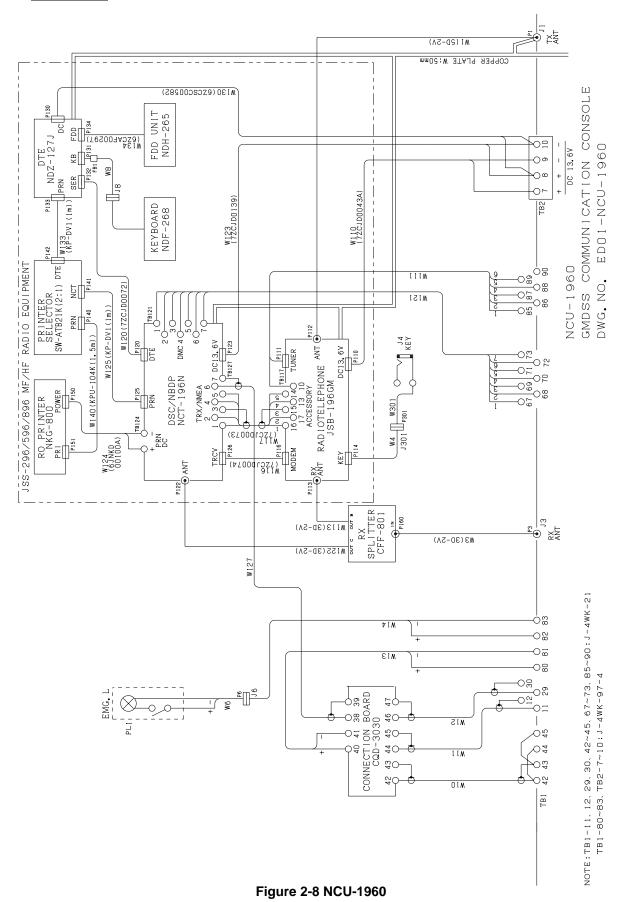

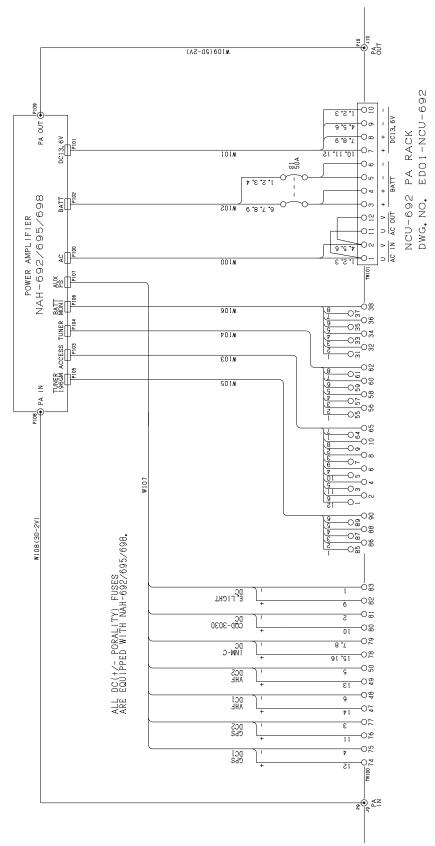


Figure 2-9 NCU-692